
AR82.20-P-0110GH	Removing and installing front dome lamp	13.3.97

MODEL 163

1 Overhead control panel
2 Bulb
3 Socket
4 Dome lamp switch
5 Screws
6 Reflector housing

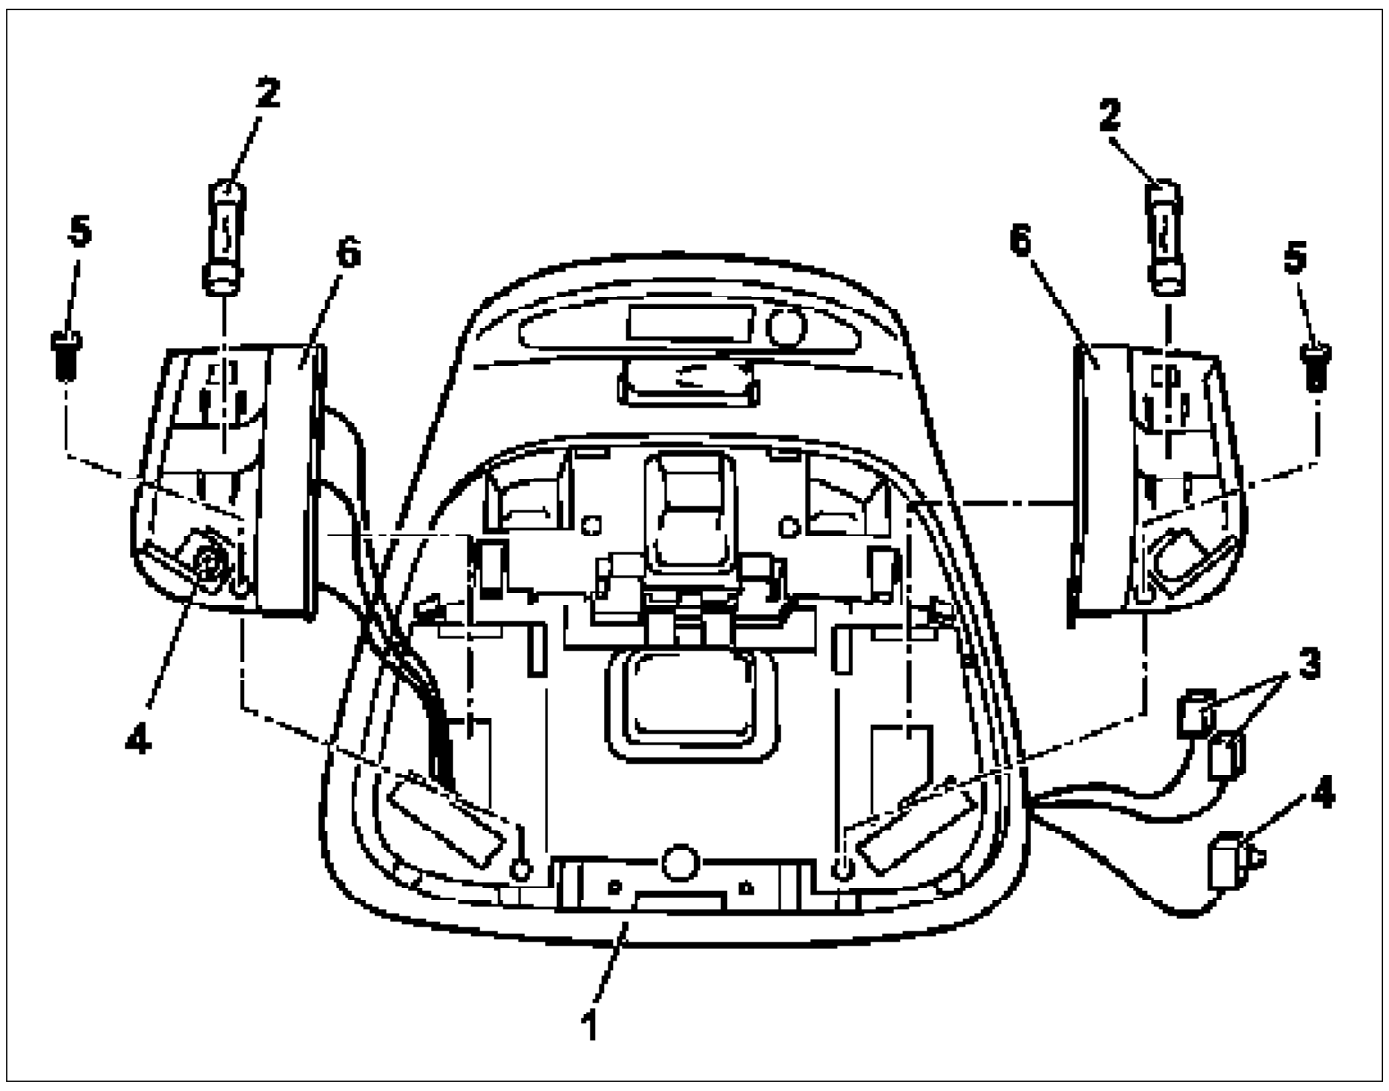

P82.20-0400-11

	Removal, installation		
1	Remove overhead control panel (1)		AR82.20-P-1100GH
2	Remove bulb (2)		
3	Release socket (3) for bulb (2) by pressing in	The bulb socket is clipped to the overhead control panel.	
4	Pull dome lamp switch (4) off of reflector housing (6)		
5	Unscrew screws (5) from reflector housing (6) on left and right on overhead control panel (1)		
6	Pry reflector housing (6) out of overhead control panel (1)	Avoid damaging reflector housing	
7	Reinstall in opposite order		